

It is easiest to put up the Nordic tipi on top of the snow.

Harden the snow with skis, snow-shoes or a snowmobile.

Use, for example, thick twigs or branches as tent pegs. Use the ring to make a loop with the ground strap, put the "tent peg" through that loop and lay it horizontally on the snow. Shovel snow over it and stamp on it. Do the same thing all the way round. Before putting up the central pole and tightening the ground straps, let it all freeze hard for a while.

Our special snow pegs are a good alternative to using twigs or branches as tent pegs. The snow and sand pegs are also excellent for use on sandy ground.

Put a cross made of wooden planks or a piece of plywood under the central pole.

### Caution!

If there is a risk of snowfall, then fix the tent with the storm cords and ensure the Nordic tipi is properly tensioned. Make sure to remove any snow from the Nordic tipi. Just a few centimetres of wet snow can comprise a couple of hundred kilos of weight on a size 9 Nordic tipi. If the snow is not removed, the central pole can break and the Nordic tipi may collapse. If this should happen when a fire or stove is in use inside the tent, this could cause great damage and people could be seriously injured.

The guarantee does not cover damage caused to the central pole or fabric by the weight of snow.

